

SUPPLEMENT TO TONNEAU INSTALLATION INSTRUCTIONS

2005-2015 Honda Ridgeline

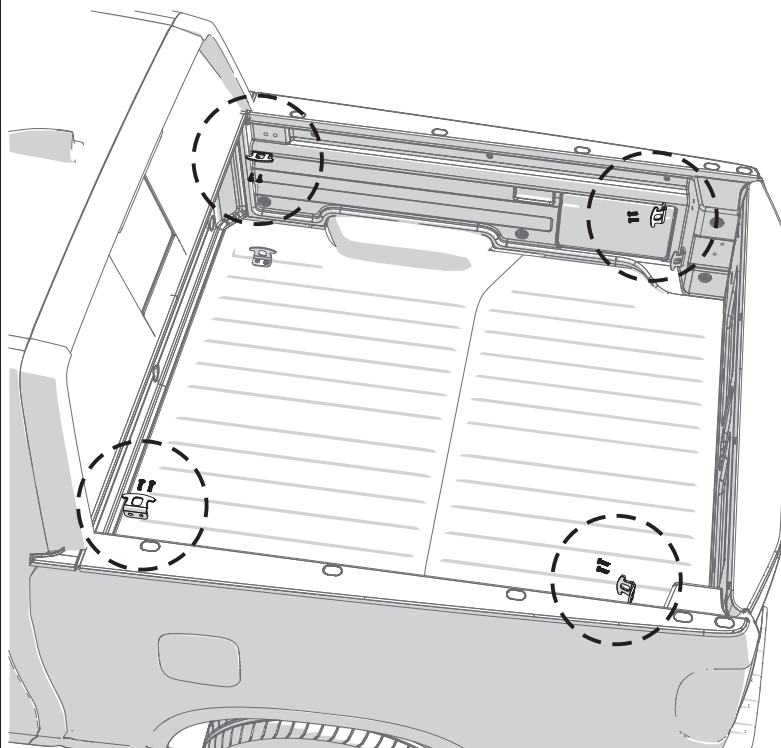
Tools Required:



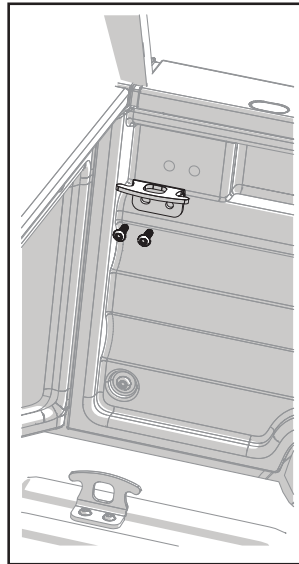
- T50 Torx driver
- 7/16" Wrench

1

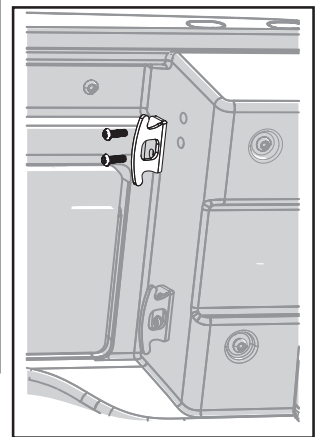
Remove the 4 upper tie-down hooks. Keep the 8 Torx bolts, but do not reuse the tie-down hooks.



Front, upper tie-down hooks.
Both sides.

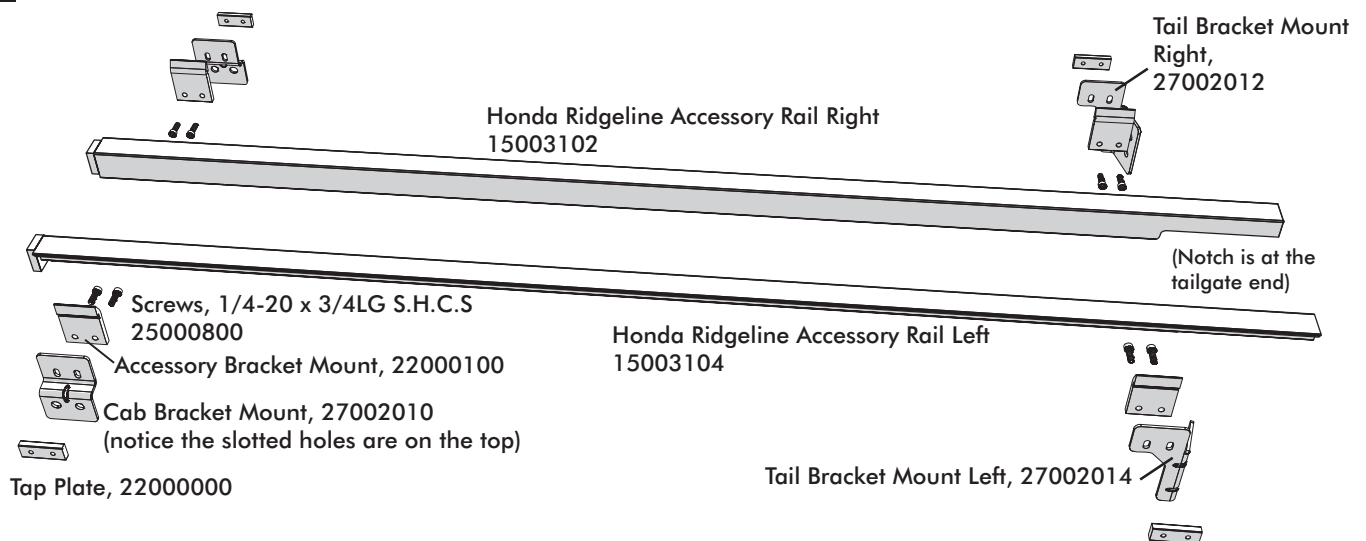


Rear, upper tie-down hooks.
Both Sides.



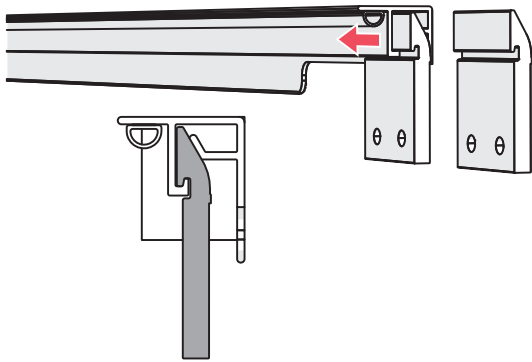
2

Align the parts for assembly as shown.

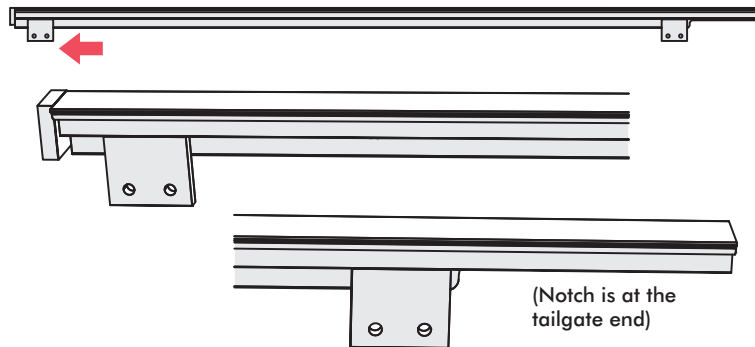


3

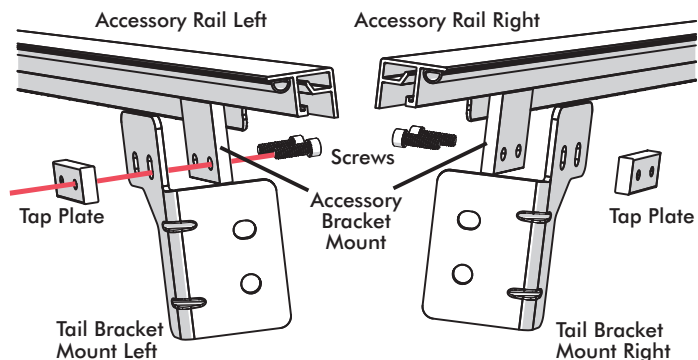
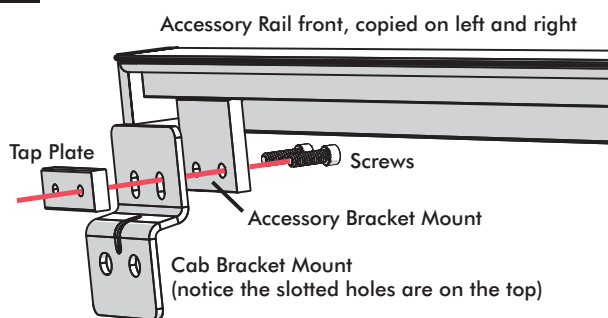
Slide two of the accessory bracket mounts into each rail. Align with the rail interior profile as shown.

**4**

Slide one accessory bracket mount to the front, leaving the other at the tailgate end of the rail.

**5**

With the accessory bracket mounts slid into the rails, assemble the brackets as shown. Loosely tighten the screws.

**6**

With the brackets mounted to the rails, place the rails on the truck. Position the rail so the front cap pad firmly contacts the bulkhead. Align the brackets so that they line up with the factory tie-down hook bolt holes, then thread in the factory bolts and tighten.

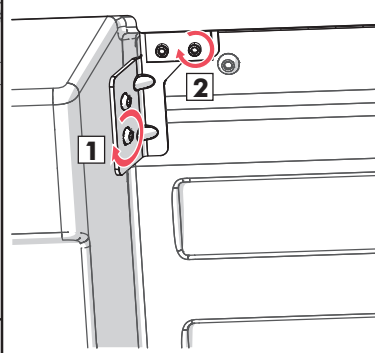
Tighten the front hardware while pushing down on the rail to make good seal contact with the truck bed at the same time also pushing the rail forward to keep good contact between the cap pad and bulkhead. Continue to push down on the rail while tightening the rear bracket hardware.

Cap pad to bulkhead

6B

Tighten both Torx bolts, then tighten both Allen head bolts.

Push down

**6A**

Tighten both Torx bolts, then tighten both Allen head bolts.

Push down

Push forward

