

RAM BOX SUPPLEMENTAL INSTALL SHEET


Install of Revolver X2 Rail to Ram Box Accessory Rail




IMPORTANT: READ FIRST



- 1** Install the 3/4" bulkhead seal to the top of the bulkhead at the edge of the bed opening.


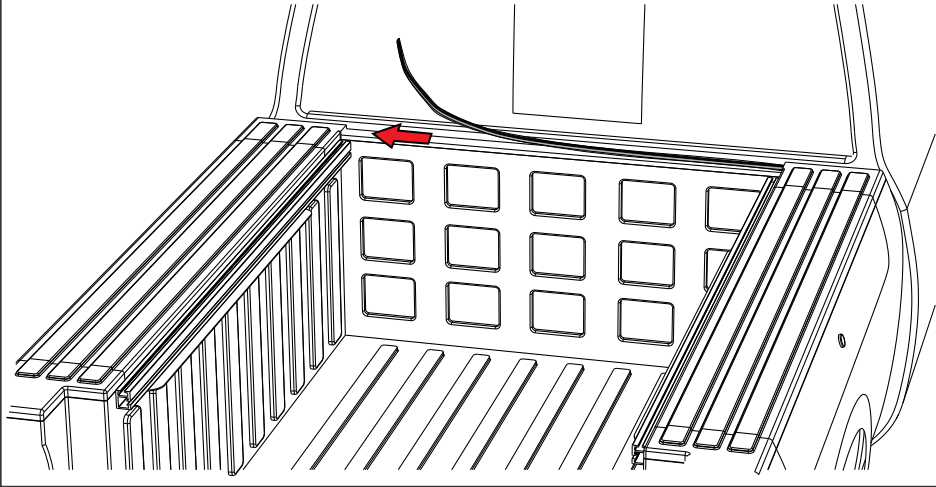


- 2** Remove the factory accessory rail end cap, and any accessory cleats.

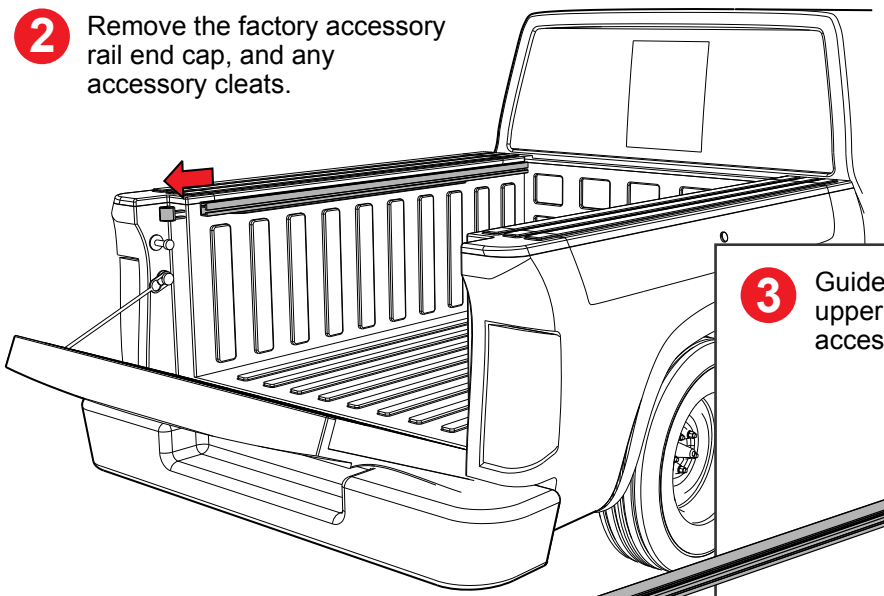


Steps 2 through 6 are required and repeated on both sides.

- 3** Guide the tonneau rail into the upper half of the factory accessory rail

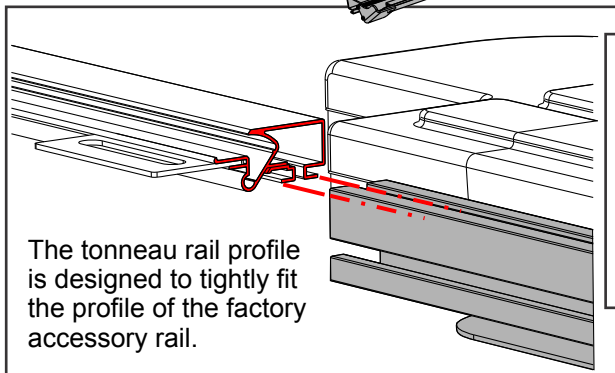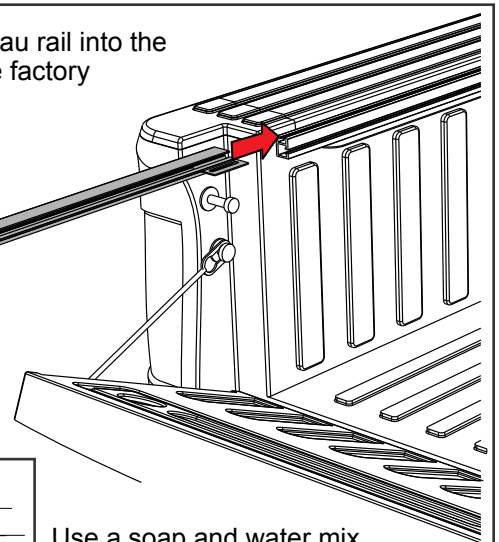

The tonneau rail profile is designed to tightly fit the profile of the factory accessory rail.

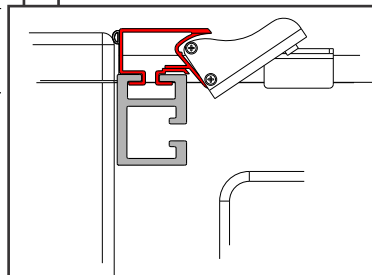

Use a soap and water mix to help with sliding the rail and the rail seal all the way along the factory rail slot to the front of the bed.

HRC

RAM BOX SUPPLEMENTAL INSTALL SHEET

Install of Revolver X2 Rail to Ram Box Accessory Rail




IMPORTANT: READ FIRST




4

Make sure the tonneau rail is all the way forward, so that the slotted bracket is touching the bulkhead.

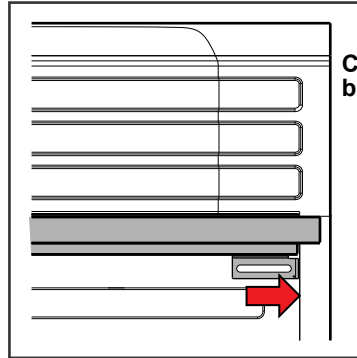


Cab/
bulkhead

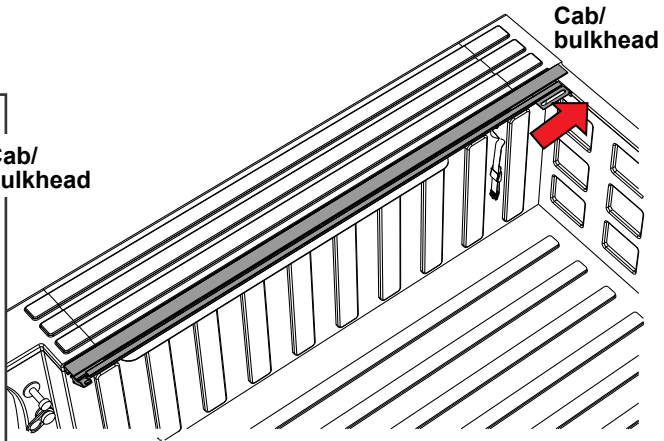



Cab/
bulkhead

5

Slide the strap and buckle into the factory accessory rail.

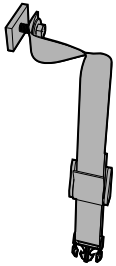


The strap and buckle mounting block slides into the factory accessory rail lower half.

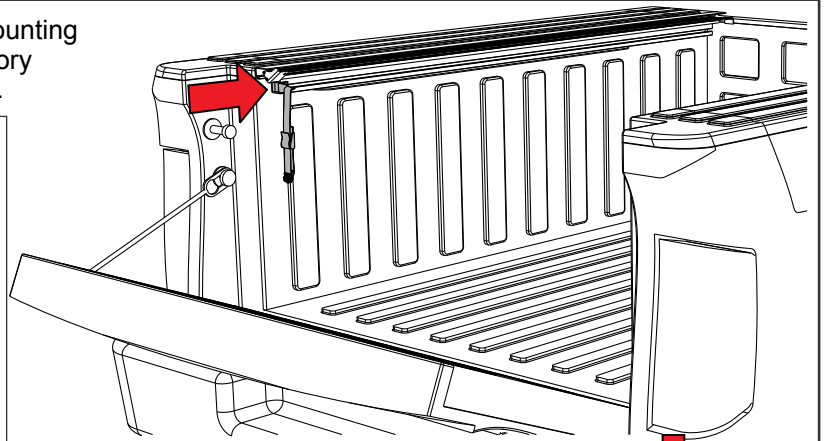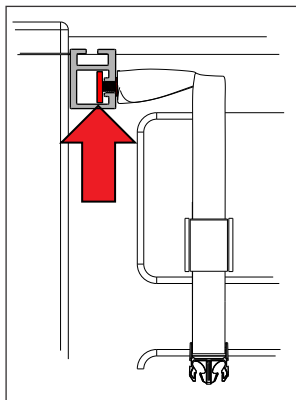


6

Replace any removed factory accessory cleats.

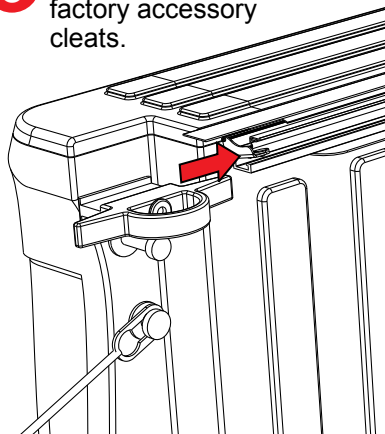

Slide the strap assembly forward towards the cab.

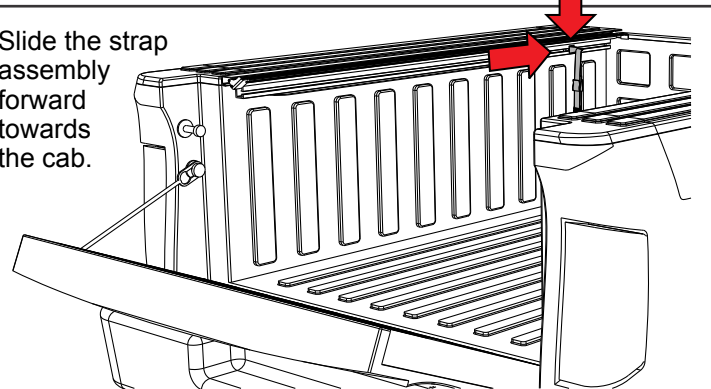

The final placement and tightening of the strap will happen later when the cover is in place.

HRC

Return to Step 8 of the standard install sheet